



Use this button to turn your set top box On/Off.

Use this button to turn your TV on/off.

This button tells the remote to control the Set top box. If you are unable to change channels push this button then try again.

Avoid this button. It tells the remote to control the TV rather than the Set top box. If you are unable to change channels with the remote you probably pushed this button. Push the STB button to fix the problem.

This button only works with the DVR box push it to rewind live TV or a recorded program. Push it again to rewind faster a third push will go faster.

This button will pause live TV on the DVR. Push it again to resume watching.

The blue button and exit button will exit the onscreen guide or menu and return to your TV program.

Push this to fast forward a recorded program or one that you paused earlier. Great for skipping commercials Press a second time to go faster..

The yellow button and guide button will bring up the program guide. push it again and it will switch to any favorites lists you have created. If some of the channels are missing from your guide Try pushing this button.

The Info Button will tell you more about the program your watching. Push a second time for more info.

The menu button opens the STB menu where you can access the DVR, favorites, settings, Guide, and Search

These are Record and Stop. On the DVR these will record a program you are watching or stop the recording of a program. The red light will display on the DVR when you are recording.

Volume Control

Channel Up/Down

The Mute button will quiet the sound on your TV

Enter the channel number then Press OK to go directly to the channel.

The AV button will allow you to cycle through the connections on the back of your TV. If the STB is on and you have no picture try pushing this button to set your TV to the correct Input

These buttons are not currently used

When the guide is displayed these buttons will move up or down a page at a time.

# TV / Remote Quick Guide